

**116.492 BASEMENT STORAGE TANKS; REMOVAL.**

A person who removes a basement heating oil storage tank shall ensure that fill and vent pipes through the basement wall to the outside are also removed or permanently sealed.

**History:** *1992 c 597 s 3*